


Installation Guide

HookStop™ flexible tile

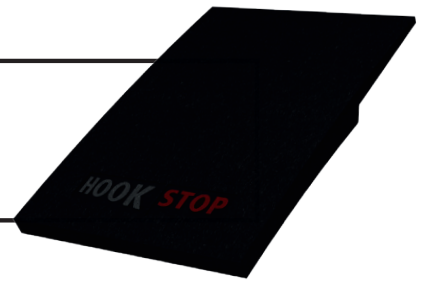

- 1** Remove the rosemary/clay plain tiles from directly underneath and above where the REDtip™ roof hook is to be fitted.



- 2** Replace the tile directly under where the REDtip roof hook is to be fitted with a HookStop™ and fit directly onto the roof batten with the appropriate fixing.



- 3** Secure the REDtip™ M100 roof hook onto roof truss using the M6 x 80 REDtip™ roof hook screw.



- 4** Place the tiles over the HookStop™ to make weatherproof.



Visit Our Website For More Information

